




## Can Am, Commander Installation Instructions

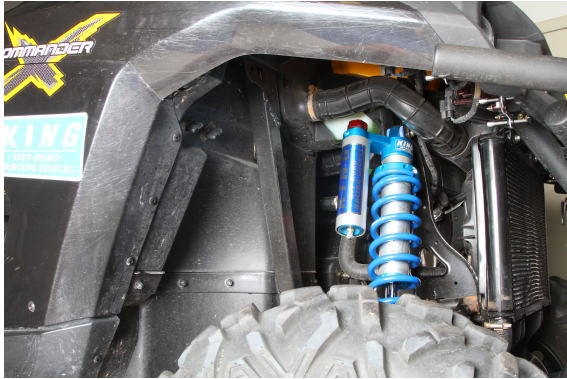

Front Shock

KING OFF-ROAD RACING SHOCKS  
12472 Edison Way, Garden Grove CA 92841  
(714)-530-8701  
[WWW.KINGSHOCKS.COM](http://WWW.KINGSHOCKS.COM)



Rear shocks

**IMPORTANT:** Read all instructions thoroughly from start to finish before beginning the install. Make sure all parts are included in the kit. If the instructions are not properly followed, severe frame, driveline and or suspension damage may result. Check for frame and suspension damage prior to installation. This kit does not require welding. Do not weld on any component. Welding may void the warranty and cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks. 714-530-8701 Most important after the install, Feel the difference, Nothing rides like a King.