



2021+ Ford Bronco 2.5 Front Coilover

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com


Front Parts List:

- 2 – 2.5 Front Coilover Shocks (25001-392)
- 2 – Reservoir Brackets (25048-063)
- 1 – Hardware Kit (KH02-181)

Tools Required:



- Floor Jack/Jack Stands
- Metric Wrench/Socket Set
- Standard Wrench/Socket Set

2021 Ford Bronco
DEM PERFORMANCE SERIES

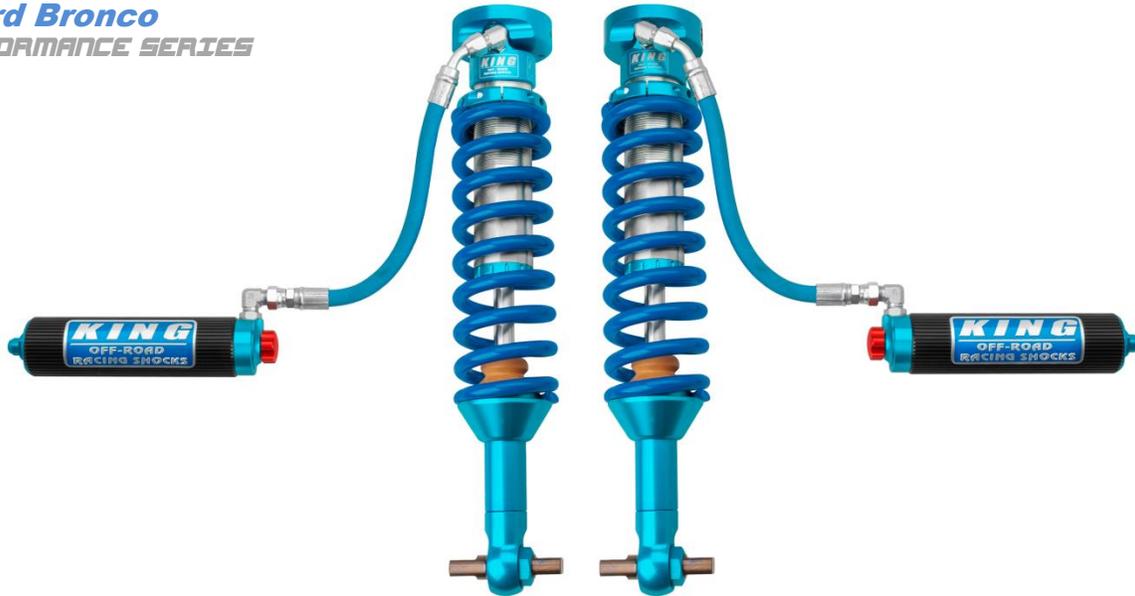

FRONT: With the vehicle on level ground, set the emergency brake and block the rear tires. Using a floor jack, raise the front end and support the frame rails with jack stands for safety. Remove front tires. **NOTE: Never work under an unsupported vehicle.**

1. Unbolt the ABS and brake line bracket from the knuckle. Be careful not to damage the brake and ABS lines as you are removing and installing shocks.

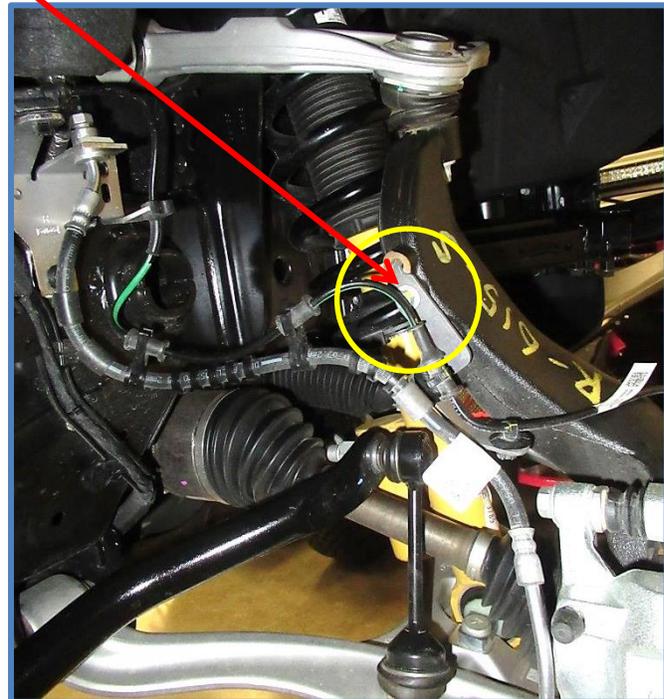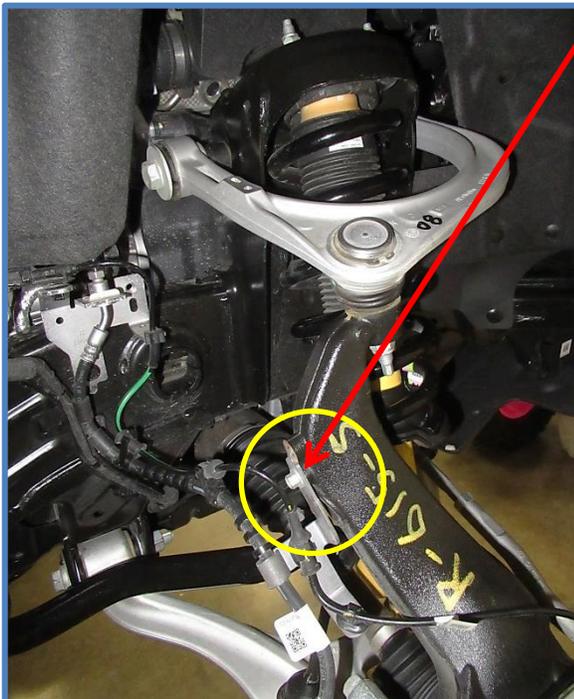

IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.


This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.



2021+ Ford Bronco 2.5 Front Coilover

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com


2. Remove the upper mounting nuts using a 15mm wrench or socket.

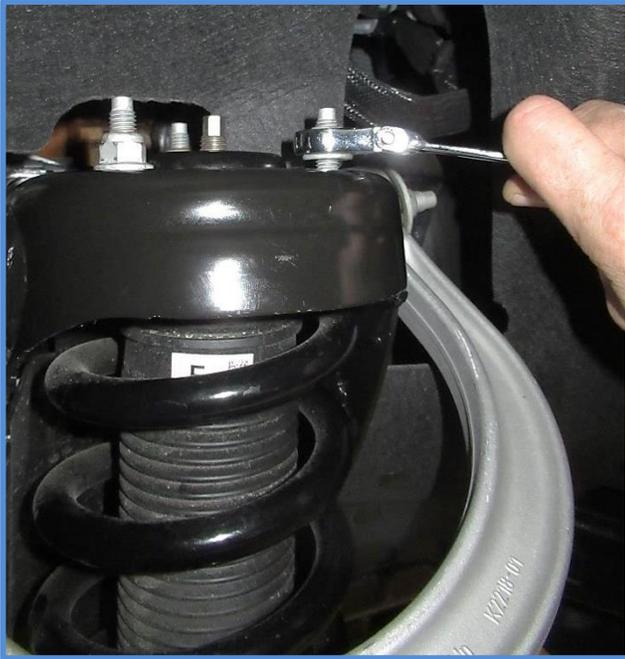

3. Remove the lower mounting nuts using an 18mm wrench or socket.



4. Separate the upper control arm from the knuckle. Using an 18mm wrench or socket remove the nut for the control arm ball joint, then disconnect upper arm from knuckle.

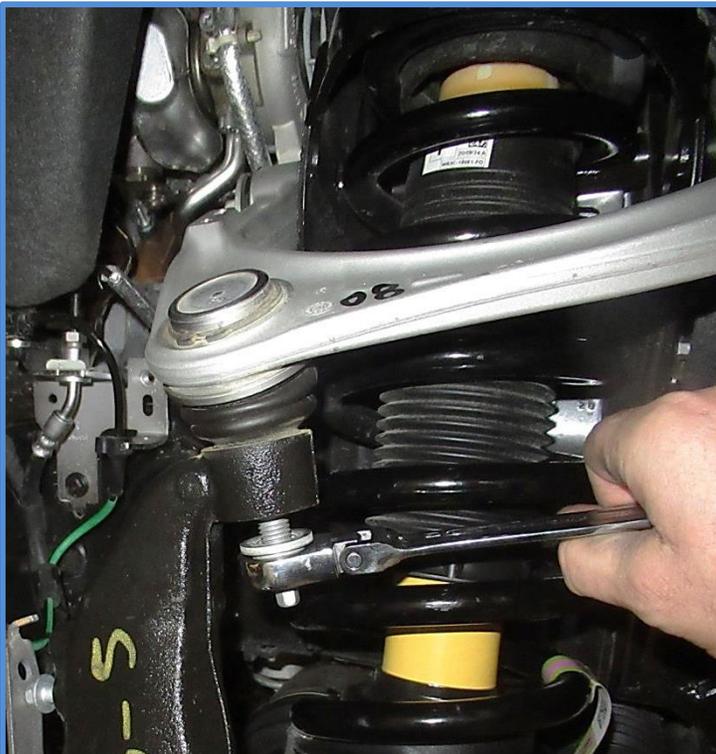

IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.


This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.



2021+ Ford Bronco 2.5 Front Coilover

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com

5. Remove the nut from the tie rod end using a 21mm socket and separate the tie rod from the knuckle.

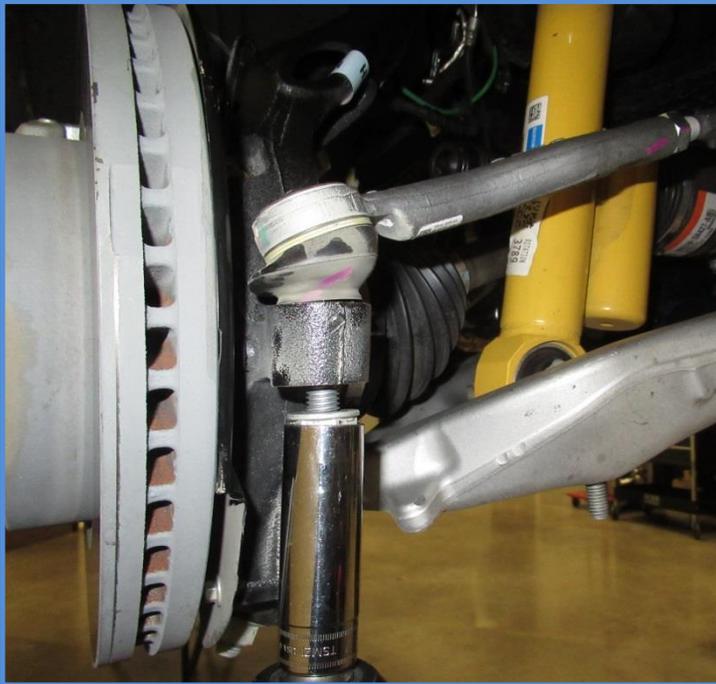

6. Disconnect the sway bar links on both sides of the vehicle. Remove the nut using a 21mm wrench, you may need to hold the stud with a hex key to keep the stud from spinning.



IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.




This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.



2021+ Ford Bronco 2.5 Front Coilover

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com

7. In order to remove the shock you will need to remove the lower control arm bolts. Make match marks on the cams so you can put the control arms back in the stock locations. Remove front lower control arm bolt and slide the rear bolt out as far as you can. This will allow you to push the lower control arm down enough to get the studs out of the lower control arm. Pull the bottom of the shock out of the lower control arm, then remove shock from vehicle.

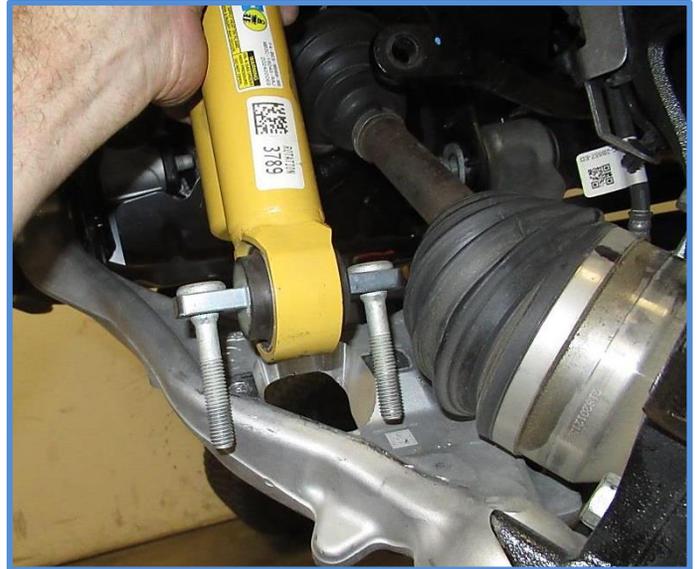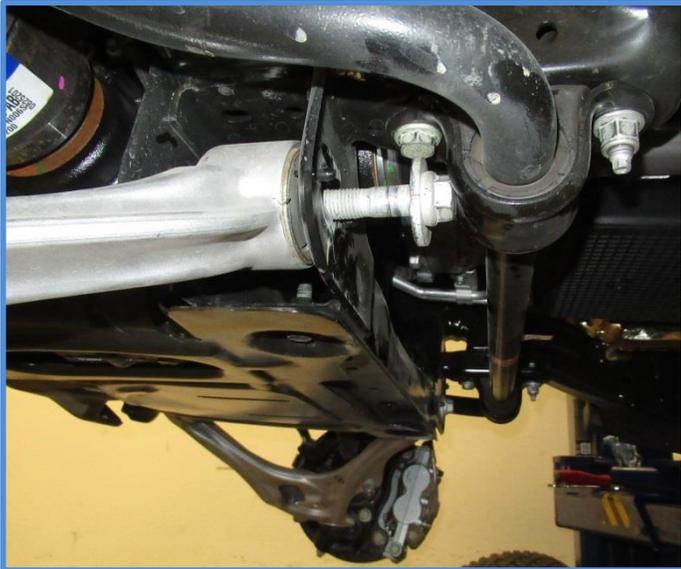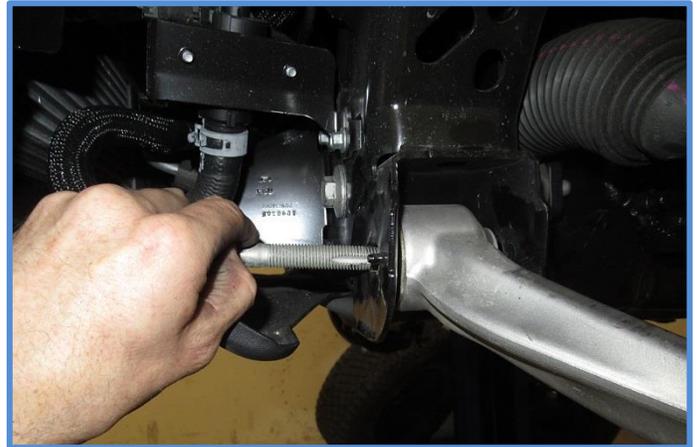

Place the lower control arm back into the lower mount and install the cam bolts to the same position prior to removal and tighten to factory specs. The vehicle will need to be aligned properly after the install but keeping the factory settings will get you to the alignment shop.



IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.




2021+ Ford Bronco 2.5 Front Coilover

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com

8. Installing King Shocks – Shocks are side specific, make sure you are installing the shocks on the correct side. Hose and reservoir will be towards the front of the vehicle. Place the shock on the lower control arm then maneuver the top of the shock into the upper mount.



9. Install the provided 3/8" upper mounting bolts (CB4701) with HD washers (CW1701). Thread the bolts into the upper mounting plate to hold shock in place but do not tighten yet.

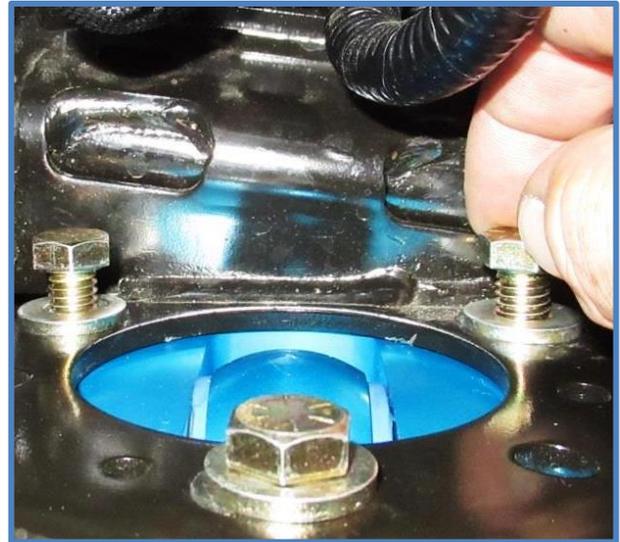

10. Install the provided 12mm X 80mm bolt (CB3829) with washer (CW1001) through the lower mounting lug and lower control arm. Place the reducer sleeve over the bolt and then install the factory nut. Thread the nut onto the bolt but do not tighten yet.



IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.



2021+ Ford Bronco 2.5 Front Coilover

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com

11. Reconnect tie rod and tighten to factory specs.



12. Reconnect the upper control arm and tighten to factory specs.



13. Now you can torque the upper and lower mounting bolts. Torque the upper bolts to 35 ft/lbs. using a 9/16 socket. Torque lower bolts to 90 ft/lbs. with an 18mm socket on the nut & 19mm wrench on the bolt head.



IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.


This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.




2021+ Ford Bronco 2.5 Front Coilover

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com

14. Reinstall ABS/brake line bracket.

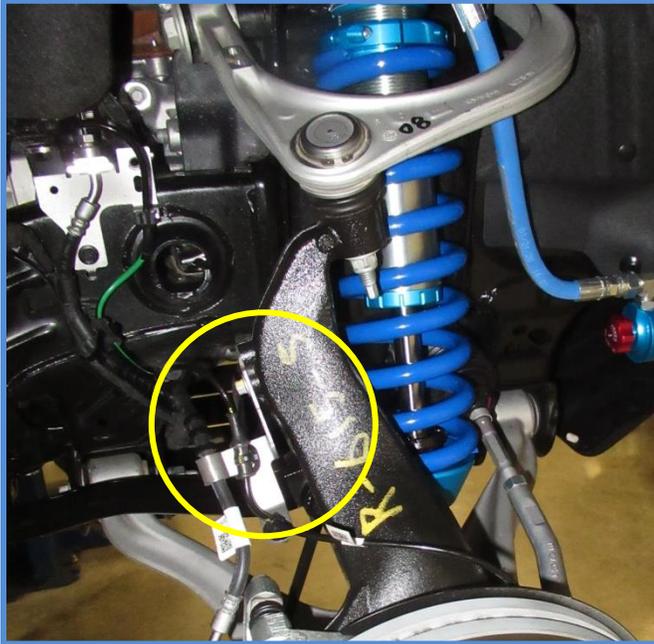

15. Reconnect the sway bar links.

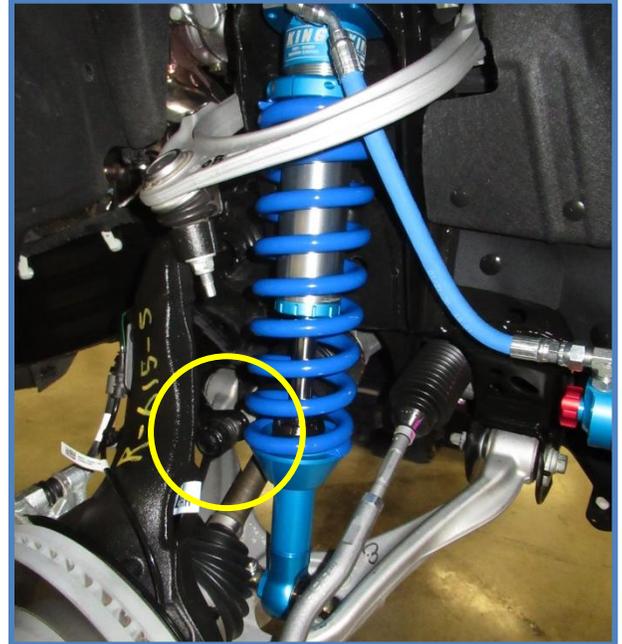

16. Mounting reservoirs – First attach the reservoir clamps to the reservoir brackets. Use the 1/4 X 1/2" BHCS (CB2420) to attach the reservoir clamps. Photos below show bracket for right side of vehicle. For the left side of vehicle mount clamps on opposite side of plate.



IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.



2021+ Ford Bronco 2.5 Front Coilover

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com

17. Remove the two factory bolts from the front cross member as shown below.



18. Slide the reservoir into the reservoir clamps then place the bracket on the front cross member and reinstall the two factory bolts.



19. Install the 1/4 X 1" bolts (CB1501) in the reservoir clamps and tighten using a 3/16 Allen wrench.




IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.



2021+ Ford Bronco 2.5 Front Coilover

King Shocks 12472 Edison Way Garden Grove, CA 92841
714-530-8701 www.kingshocks.com

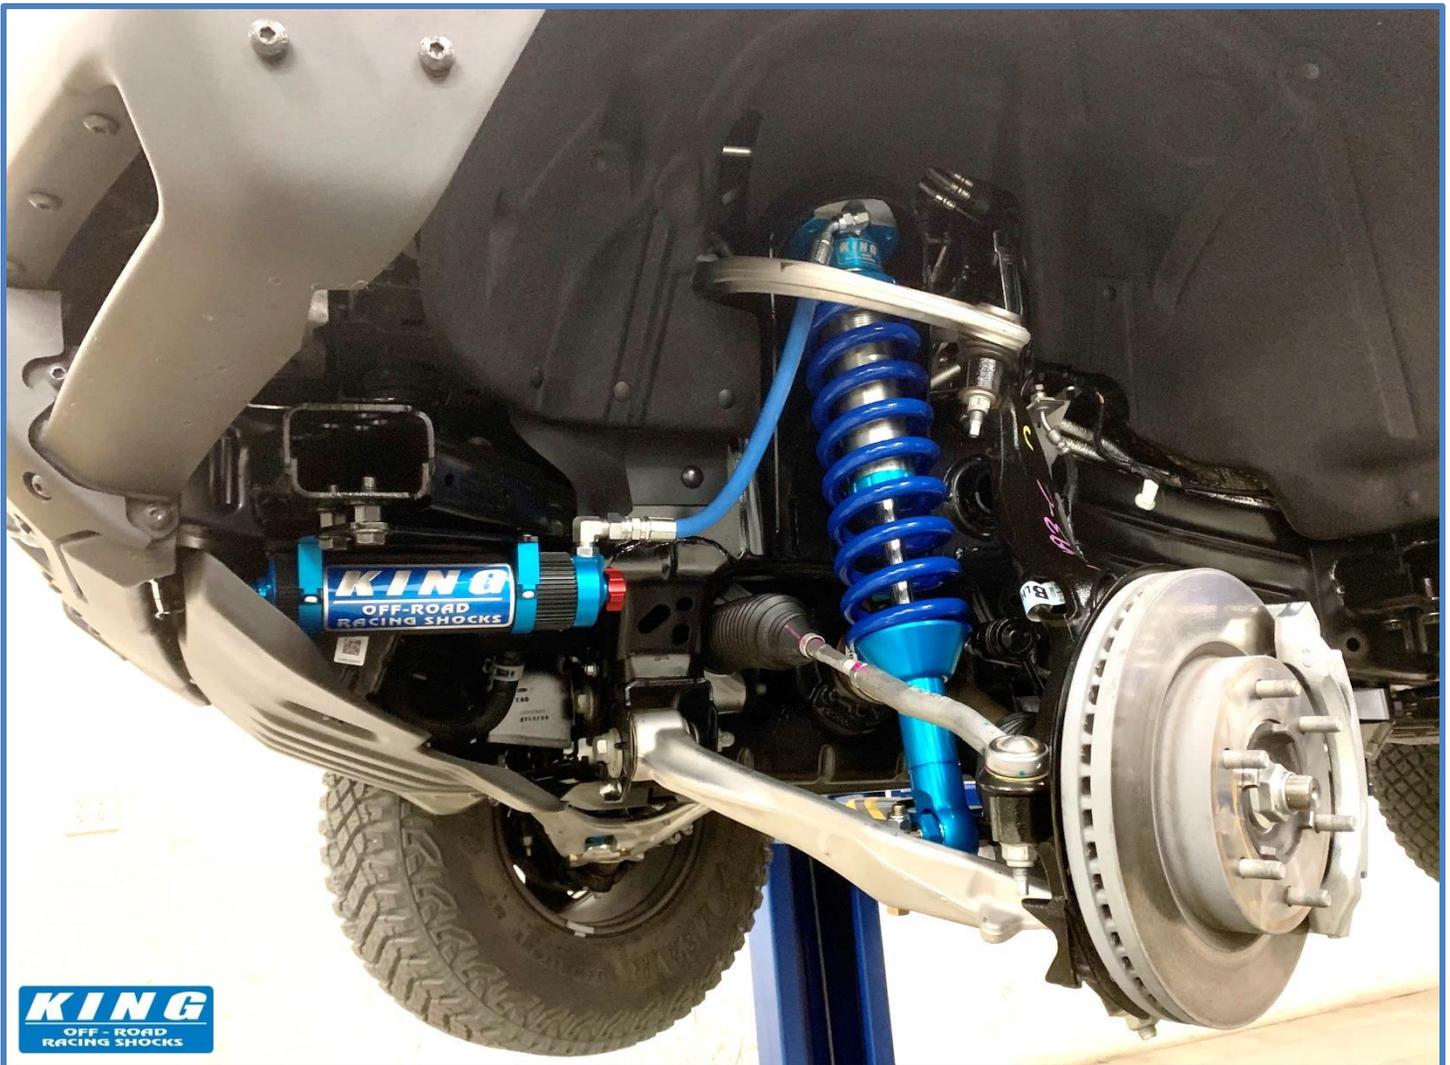

DOUBLE CHECK ALL HARDWARE:

Make sure everything is installed correctly and all hardware is tight before reinstalling tires. Install tires, remove jack stands and lower vehicle to the ground. Recheck all hardware and lug nuts after 100 miles and periodically after that as part of routine maintenance.

Alignment is critical:

A professional alignment must be performed before driving this vehicle at highway speeds. Do not attempt to drive your vehicle after this install without having the alignment readjusted to factory specs!

IMPORTANT: Read all instructions thoroughly from start to finish before beginning the install. Check parts list and make sure all parts are included in the kit. If the instructions are not properly followed severe frame, driveline and/or suspension damage may result. Check for frame and suspension damage prior to installation.

This kit does not require welding. Do not weld on any component. Welding may void the warranty and/or cause the product to fail. If any parts are missing, or for tech assistance; Contact King Off Road Racing Shocks: 714-530-8701 Most important after the install, Feel the difference and have fun.